


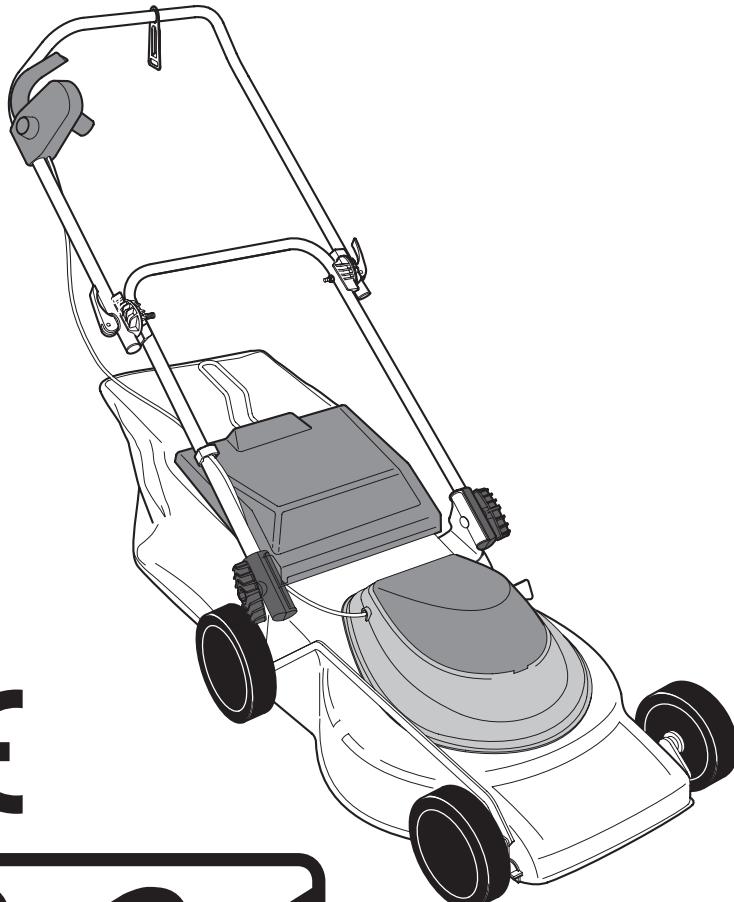

EN


CE




MARINA SYSTEMS SRL











VIA F. BARACCA, 3
24034 CISANO BERGAMASCO BG










info@marinasystems.it
www.marinasystems.it

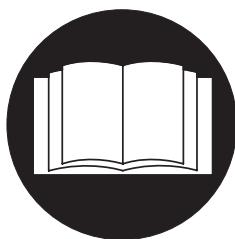

I

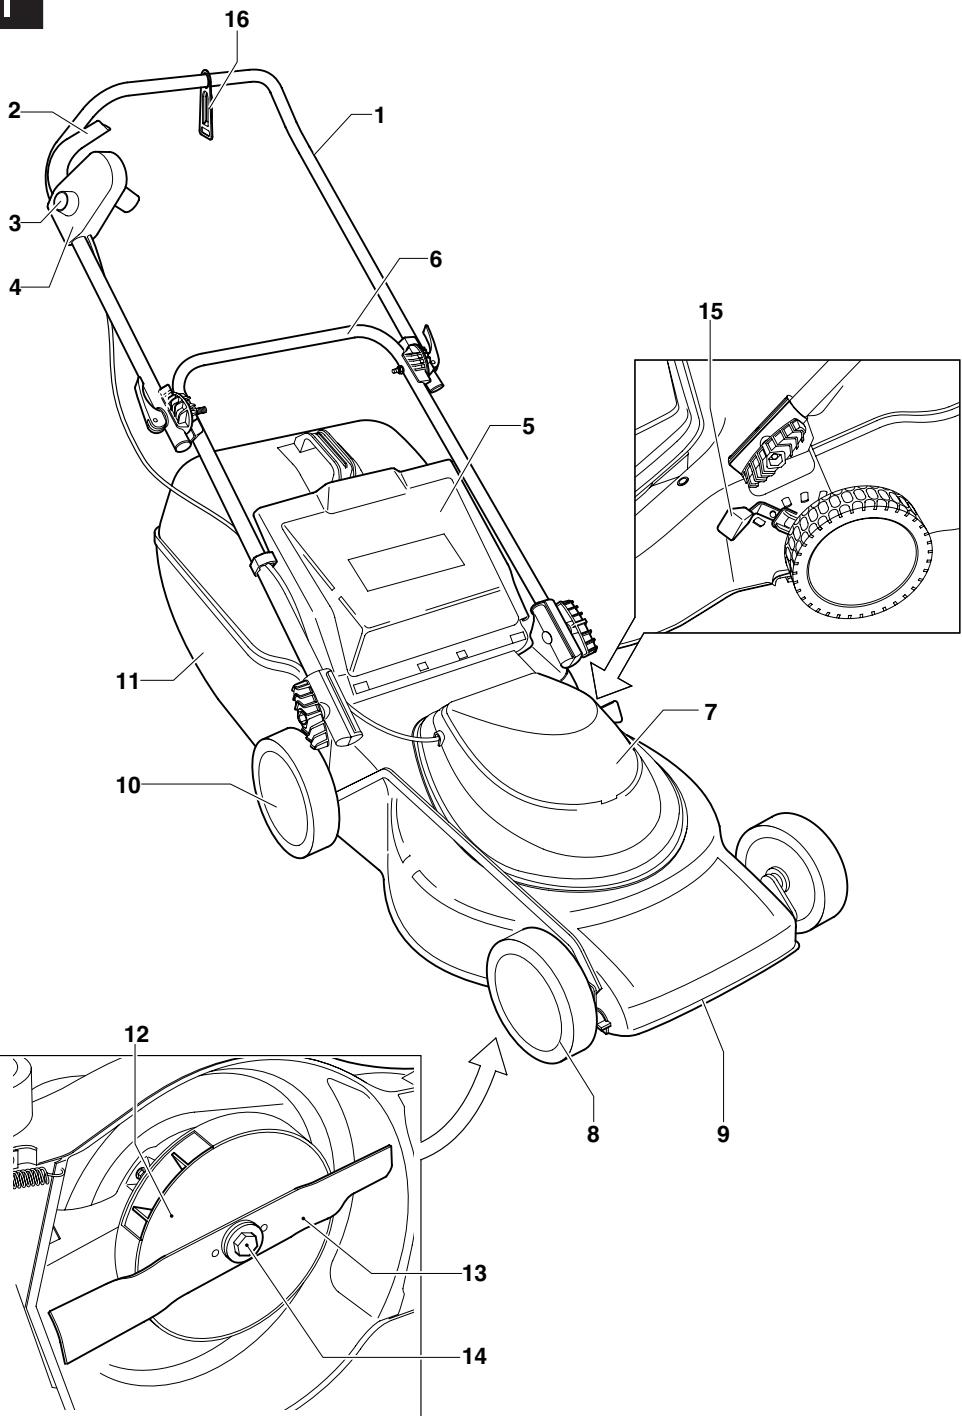

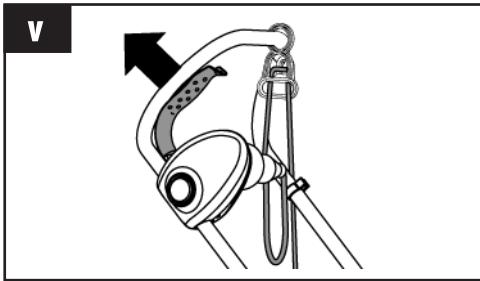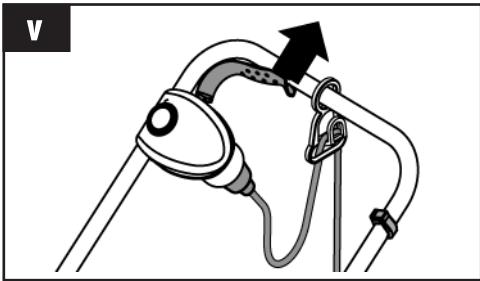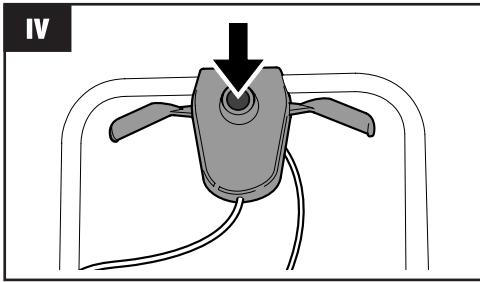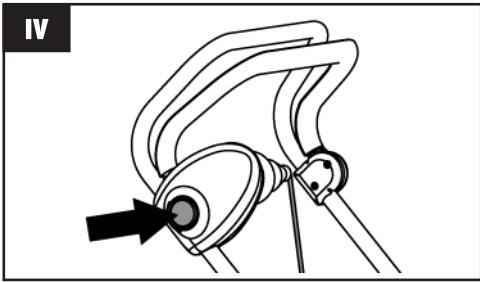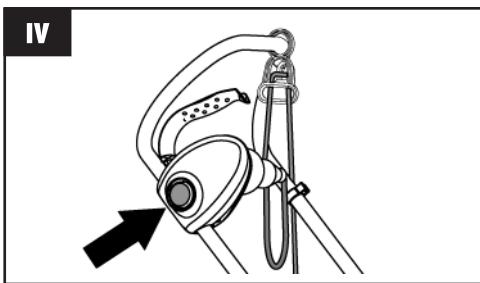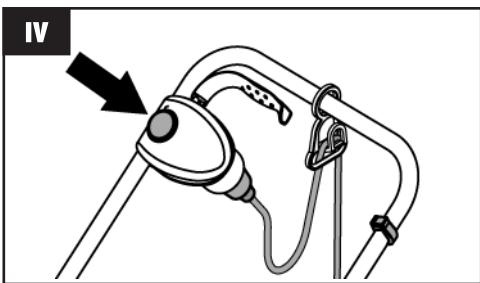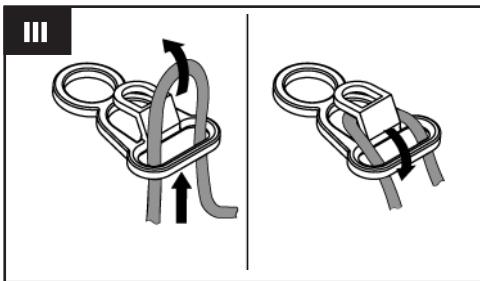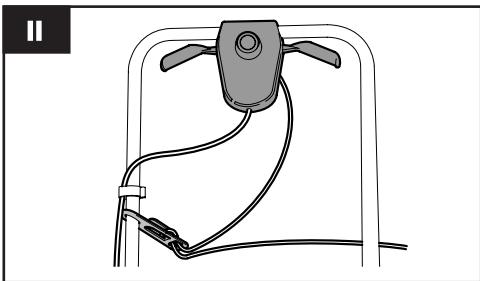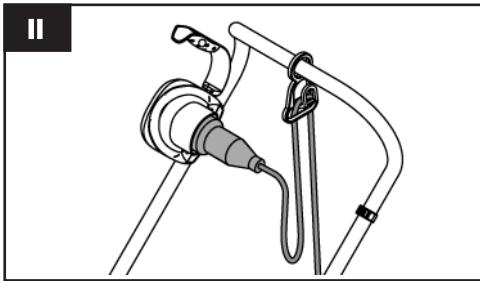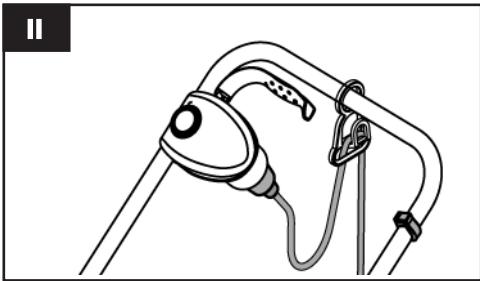

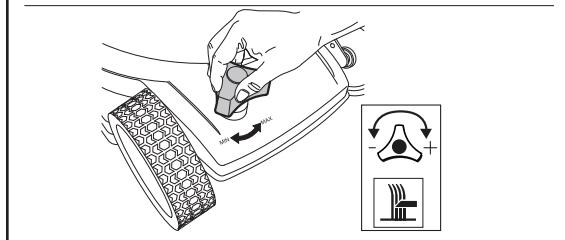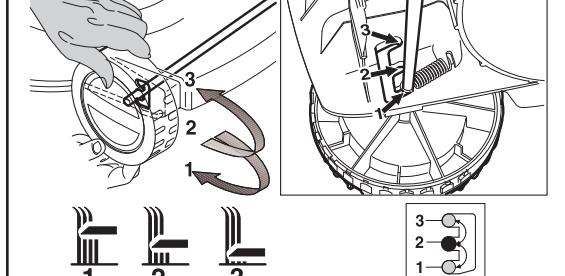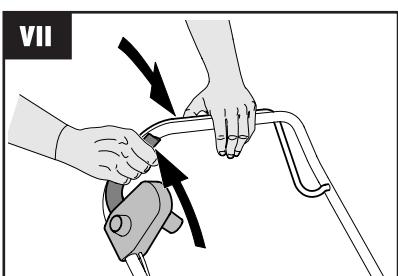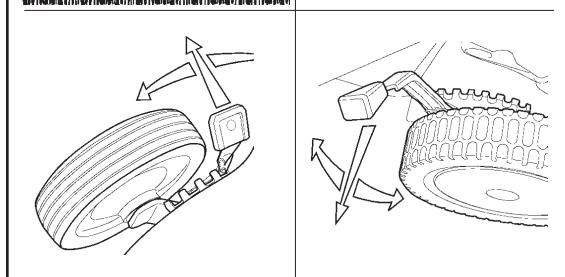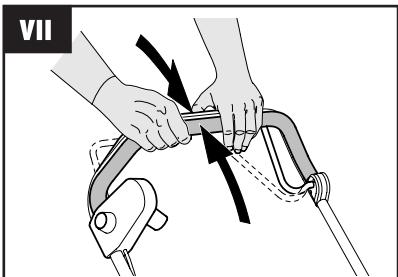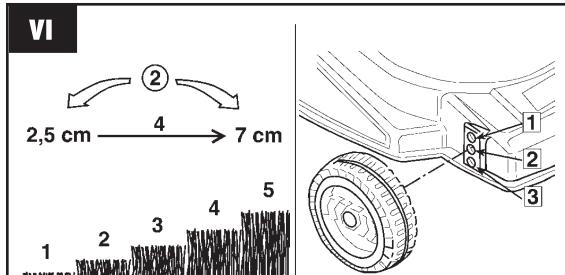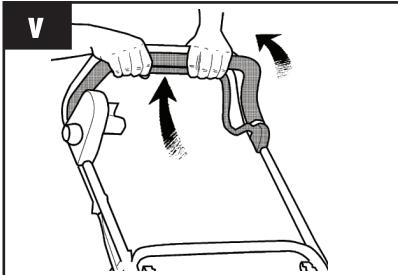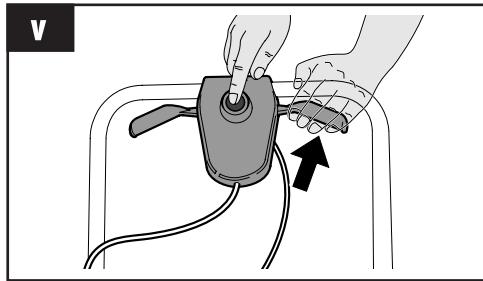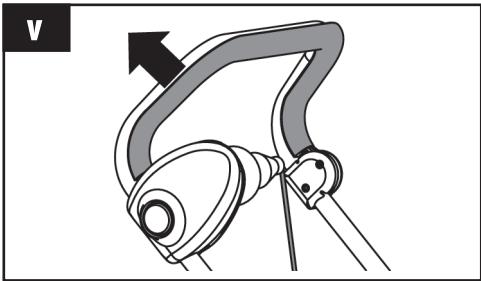

Translation of the original instructions**INDEX**

1	SAFETY INSTRUCTIONS
2	EXPLANATION OF THE SYMBOLS ON THE UNIT
3	DESCRIPTION
4	INTENDED USE
5	ASSEMBLY
6	SWITCHING ON THE UNIT
7	MAINTENANCE AND CARE
8	TROUBLESHOOTING

1 SAFETY INSTRUCTIONS

When using lawn mowers, comply with the following basic safety instructions to protect against risk of injury:

- Read and then comply with the operating manual.
- Keep the operating manual for subsequent use or for the next owner.
- Follow the safety instructions and warnings on the unit.

Users

- Children and young people under 16 years old and who not familiar with the operating instructions must not use the unit. Local regulations may specify the minimum age.
- Wear long, tight-fitting trousers and non-slip footwear.

Working area

- Carefully check the whole working area. Remove all foreign objects such as stones, sticks, wire, bones, etc.
- Do not use the lawn mower if there are any persons (caution: children) or animals (including wildlife) in the working area.

Operating times

- Observe national operating times for lawn mowers (noise prevention).
See operating manual for permitted operating times.
- Use the lawn mower only in daylight or if the working area is well illuminated.

Protection from electric shock

- It is not permitted to operate the lawn mower without a residual-current-operated circuit-breaker. Maximum permitted tripping current: 30 mA.
- Connection cables according to the following specifications: Minimum cross-section: 3 x 1.5 mm², not less tough than ordinary tough rubber-insulated flexible cables (HO5 RN-F in compliance with DIN 57282 Part 1/VDE 0282 Part 1) or a power connection cable which has been demonstrated to be suitable for use with lawnmowers.
- Plugs and couplings must be made of rubber, soft PVC or other thermoplastic material with identical mechanical strength or they must be covered with this material.
- The plug-and-socket devices must be splash-proof.
- Damaged, brittle or entangled connection cables are not permitted.
- The electrical safety of the lawn mower is not guaranteed if the special screw for attaching the cutter is damaged.
- Always guide the connection cable.

Operation

- Always visually inspect the lawn mower before use.
- Before the use visually inspect the good condition of the blades, the adapter and the fixing screws. Damaged or worn parts must be replaced only in set to keep correct and balanced work conditions

Do not use the lawn mower in case of defective or damaged protection devices, never when the safety devices, as the deflectors or the grass catcher, shouldn't be in place or in correct positions

- Switch off the engine and pull off the spark plug connector:
- Before to remove any obstruction or clean the discharge chute
 - After the mower strikes an object
 - If the mower suddenly start to vibrate
- Keep nuts, bolts and screws tight, to guarantee a safety use of the lawn mower
- Frequently check the grass catcher shouldn't worn or damaged
- Damaged or worn parts must be replaced immediately.
- Use the unit only in a technical condition stated by the manufacturer.
- The user of the unit is responsible for any accidents involving other persons or their property.
- Switch off the electric motor before crossing surfaces other than the surface which is being mown.
- Do not start the electric motor if you are standing in front of the discharge channel (side discharge mower).
- Use the lawn mower on lawns only.
- Do not disable the safety equipment or protective equipment on the lawn mower.
- The cutter must be freely rotatable before the lawn mower is started. Disengage any drives.
- If the lawn mower has to be lifted before it can be started, the cutter must be facing away from the user.
- Keep hands and feet away from rotating parts.
- The lawn mower may only be used in compliance with the safety distance provided by the guide handle.
- Ensure that you have a secure footing.
- Never lift or carry the lawn mower while the motor is running. Wait until the cutter has

come to a standstill and pull out the mains plug.

- Always cut across a slope. Never mow up or down slopes or at an incline greater than 15°.
- Caution when changing direction of travel or when mowing backwards.
- Guide the lawn mower at walking pace only. Do not leave the lawn mower unsupervised.

Maintenance and storage

Before performing **any work** on the unit:

- Switch off the electric motor, wait until the blade has come to a standstill and pull out the mains plug.
- If working near the blade, always wear protective gloves.
- Do not spray the lawn mower with water. The lawn mower must be repaired by authorised specialist companies only.

Spare parts and accessories

- Use original spare parts and accessories only.
- We reserve the right to introduce changes to the design and model without prior notice.

Safety devices

Safety lever

Release the safety lever in case of danger. Motor and cutter will stop in few second. Do not disable the function of the safety lever.

Protective devices

Rear flap (gravel guard)

Protective devices prevent injury from objects ejected by the cutter.

Do not operate the lawn mower without protective devices.



Do not operate the machine in the rain or during thunder storms, particularly when there is a risk of lightning strike.

The risk of accidents is higher if the ground is damp due to increased danger of slipping. Particular caution should be exercised during working in order to prevent slipping.

If possible, avoid using the machine when the ground is damp.



Always wear hearing protection when working with the machine.



Caution: Danger to health due to vibrations!

Excessive exposure to vibrations can result in damage to the cardiovascular or nervous system, particularly in persons with cardiovascular problems. Please consult a physician if you experience symptoms that may have been caused by vibrational loads.

Symptoms of this kind principally affect the fingers, hands or wrists and include (incomplete list):

- numbness,
- pain,
- muscular weakness,
- skin discolouration,
- unpleasant tingling sensation.

Secure the machine and any machine components being transported (e.g. grass catcher box) on the load floor using fastening material of adequate size (belts, ropes etc.). Avoid contact with the mowing blade when lifting and carrying the machine.

When transporting the machine, always observe regional legislation, especially regarding load security and the transport of objects on load floors.

Remember that when loading or unloading the mower, do not tilt it in any direction, as this may cause contamination of the oil filter or oil leakage.

Procedure with used machinery, environment protection.

If one day you come to the conclusion that your device needs to be replaced or you do not need it anymore, remember to protect the environment and dispose of in an environmentally safe manner, in accordance with local regulations. Some authorized Service Points and sales outlets accept old equipment and utilize it in an environmentally safe manner. In case of any uncertainties or doubts concerning the operation of the device, please contact an authorized service center or the seller.

Transporting the machine

Always wear gloves in order to prevent injuries due to sharp-edged and hot components.

Use suitable loading aids (loading ramps, lifters).




Additional information on the operating instructions for the unit, section entitled “For your safety”.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

2 EXPLANATION OF THE SYMBOLS ON THE UNIT

- 1 Manufacturer
- 2 Model
- 3 Type
- 4 Serial number
- 5 Power supply
- 6 Revs
- 7 Year built
- 8 Power
- 9 Sound power level
- 10 Net weight

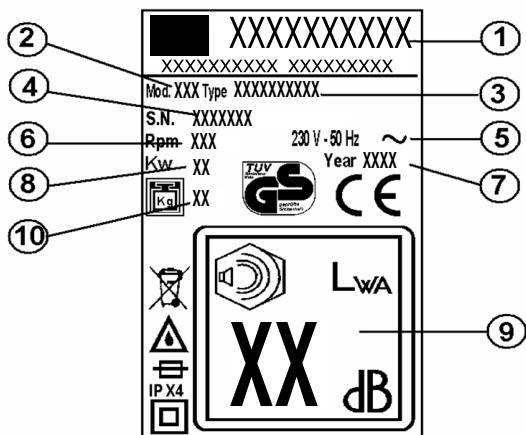

Before using the lawn mower for the first time, read the operating manual!



Keep other people out of the working area!



Before working on the cutter, always pull out the mains plug!



Warning Danger! Keep hands and feet away from the cutters!



Warning Danger! Keep the connection cable away from the cutters!



Danger. Do not use under the rain.

In this operating manual

⚠ Danger! Non-compliance could result in personal injury.

3 DESCRIPTION**I**

- 1 upper handle
- 2 safety lever
- 3 on button
- 4 switch
- 5 stone guard
- 6 lower handle
- 7 engine
- 8 front wheel
- 9 chassis
- 10 back wheel
- 11 collection basket
- 12 blade support
- 13 blade
- 14 blade screw
- 15 adjusting levers for cutting height
- 16 tear guard

4 INTENDED USE

This lawn mower has been designed for cutting grass. Any other use is not permitted.

The lawn mower is suitable for private use in the garden only. Lawn mowers for private use are those which are used for cutting grass and lawns in the garden, however not for cutting grass in public parks, playing fields or on farms or in forests.

Non-permitted users:

Persons who are not familiar with the operating manual, children, young people under the age of 16 as well as persons under the influence of alcohol, drugs or medication must not operate the unit.

Working hours for electric lawn mowers

While it is permitted to use a lawn mower at any time, operators should always show due consideration to others living nearby.

Monday – Saturday

7.00 – 12.00

15.00 – 19.00

Not allowed on Sundays and bank holidays!

5 ASSEMBLY

When assembling this appliance, please follow the instructions for assembly printed towards the end of the manual.

Protection of the environment, disposal

The packaging material is made of recyclable materials. Dispose of packaging materials in accordance with regulations.

6 SWITCHING ON THE UNIT

Do not switch on the unit until it has been completely assembled.

Before switching on the unit, always check the connection cable for signs of damage; only an undamaged connection cable may be used.

Damaged connection cables are highly dangerous!

Power connection

The mains voltage (230 V ~) indicated on the rating plate must correspond with the mains power supply. Mains connection fuse: min. 10 A.

1) Insert the mains plug of the unit connection cable into the combined switch/plug. **II**

2) Secure with the cable grip. The loop of the mains cable must be adequately long so that the cable grip can slide from one side to the other. **III**

Switching on the motor

Do not start the motor in tall grass.

1) Press the On button on the combined switch/plug. Hold down the On button. **IV**

2) Pull the safety lever against the handle and hold in position – the safety lever does not lock into position. Release the On button. **V**

While mowing, lay the connection cable safely on footpaths and on areas which have already been mown.

Switching off the motor

Release the safety lever.

The safety lever automatically returns to the zero position.

⚠ When the motor has been switched off, the cutter continues running for several seconds – therefore do not touch the underside of the mower until the cutter has come to a standstill!

Wait few seconds before restart the engine again

Setting the cutting height**VI**

All wheels must be at the same height!

Switching on the wheel drive - (applies only to units with a wheel drive) **VII**

1) Press the gear switch lever against the upper handle and keep hold – the gear switch lever does not lock into position.

Driving speed: approx. 3.3 km/h

Switching off the wheel drive

Release the gear switch lever.

Replacing and sharpening the mowing blade

At the end of the mowing season always sharpen the mowing blade or, if required, replace the mowing blade with a new one. Always have the mowing blade sharpened or replaced by a customer service centre (measurement of imbalance).

⚠ Unbalanced blades will cause the lawn mower to vibrate violently – risk of accident!

Following maintenance procedures (e.g. removal of the mowing blade) an insulation protection test must be conducted on the insulating parts in compliance with the VDE 701 guidelines customer service centre.

Storing the unit

After mowing, clean the unit thoroughly. Store the unit in a dry room – allow the motor to cool down beforehand. To reduce storage space, the upper handle can be folded down. Unscrew the wing nuts by approx. 6 revolutions.

Caution: Do not trap the electric cable when folding down the handle.

7 MAINTENANCE AND CARE

⚠ Before performing any maintenance or cleaning work, always pull out the mains plug!

Do not spray the unit with water.

Access of water may destroy the switch-plug combination unit and the electric motor.

Clean the unit with a cloth, hand brush, etc.

Expert inspection is required:

- if the lawn mower strikes an object
- if the motor stops suddenly
- if the blade is bent (do not align!)
- if the motor shaft is bent (do not align!)
- if a short-circuit occurs when the cable is connected
- if the gears are damaged
- if the V-belt is defective

8 TROUBLESHOOTING

⚠ Before performing any maintenance or cleaning work, always pull out the mains plug and wait until the cutter has come to a standstill.

Fault	Remedial action
Motor does not run	<p>Check mains connection cable and circuit-breaker (fuse)</p> <p>Start on short grass or on an area which has already been mown</p> <p>Clean discharge channel / housing – the mowing blade must rotate freely</p> <p>Correct the cutting height</p>
Motor power drops	<p>Correct the cutting height</p> <p>Clean discharge channel / housing</p> <p>Have mowing blade (sharpened / replaced) → customer service centre</p>
Grass catcher is not filled sufficiently	<p>Correct the cutting height</p> <p>Allow the lawn to dry</p> <p>Have mowing blade (sharpened / replaced) → customer service centre</p> <p>Clean the grille on the grass catcher</p> <p>Clean the discharge channel / housing</p>
Wheel drive does not function	<p>Adjust the flexible cable</p> <p>Check the V-belt / gears</p> <p>Check the drive wheels for damage</p>

Faults which cannot be rectified with the aid of this table may be rectified by a specialist company only (customer service centre).

EC DECLARATION OF CONFORMITY**MA.RI.NA. Systems srl - via F. Baracca 3, 24034 Cisano Bergamasco (Bg) – Italy**

Declare that the machine lawnmower electrical engine

- Model (a)
- Power (b)
- Cutting width (c)
- Weight (d)
- Serial number (e)

In compliance with the requirements of the following EC directives

- 1) 2006/42/EC
- 2) 2014/35/EC
- 3) 2014/30/EC
- 4) 2011/65/EC

In accordance with the following norms:

- 1) EN ISO 12100:2010
- 2) EN ISO 14982:2009
- 3) EN ISO 3744:2010
- 4) EN ISO 5395-1:2013
- 5) EN ISO 5395-2:2013
- 6) EN55014-2:1997+A1:2001+IS1:2007+A2:2008
- 7) REACH REGULATION

Also declares that the technical manual is kept at:


MA.RI.NA. Systems srl - via F. Baracca 3, 24034 Cisano Bergamasco (Bg) – Italy

Tested by: (m)

Directive 2000/14/EEC + 2005/88/EC : conformity valuation procedure followed (Annex VI)
tested by: (n)

- Measuring conditions (f)
- Grip vibrations (g)
- Measured sound power (h)
- Guaranteed sound power (k)
- Sound pressure at operator's ear (measuring uncertainty 2dB) (y)

Cisano Bergamasco, 18/01/2017

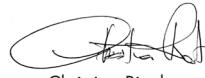
Christian Rivolta
C.E.O.

Consult the levels measured and shown on the label on the last page

DE Montage

ES Montaje

SK Montáz°

NO Montering

EN Assembly

PT Montagem

RU Монтаж

FI Asennus

FR Montage

HU Összeszerelés

EL Συναρμολόγηση

SE Montering

IT Montaggio


PL Montażé









TR Montaj










DK Montering







NL Montage

CZ Montáz°

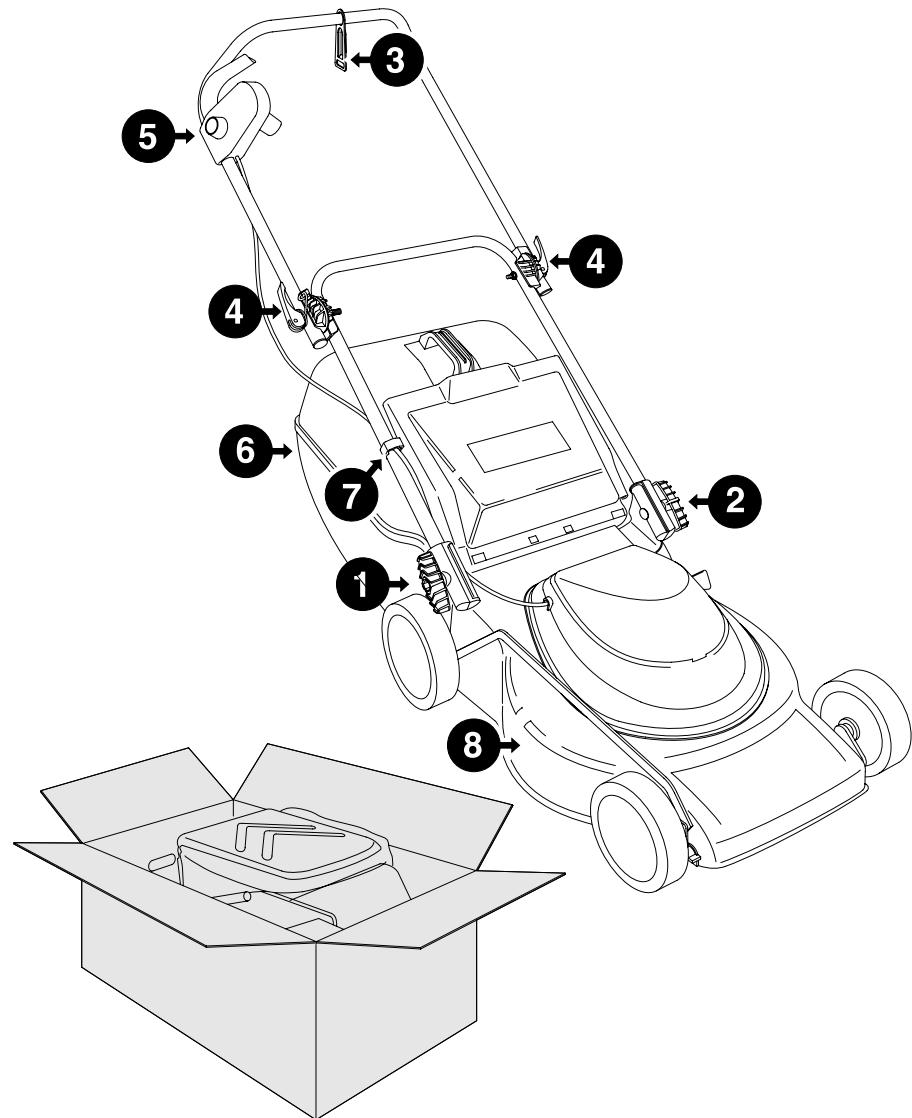

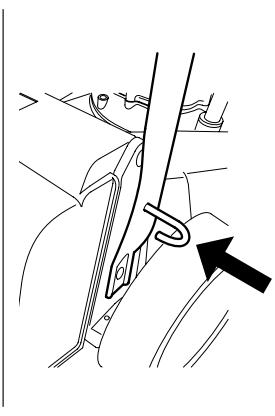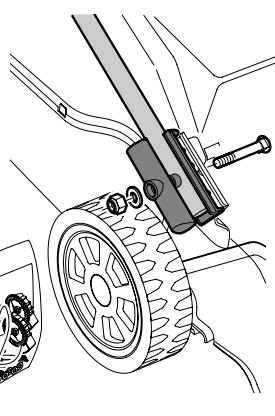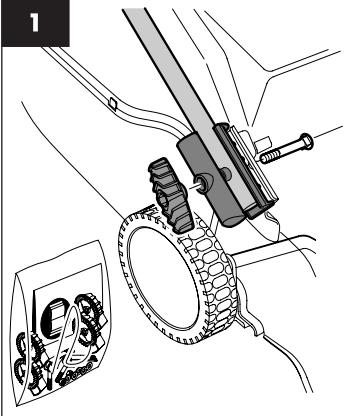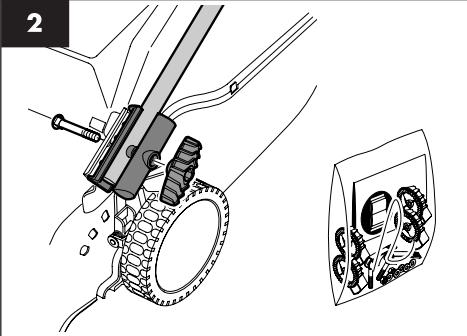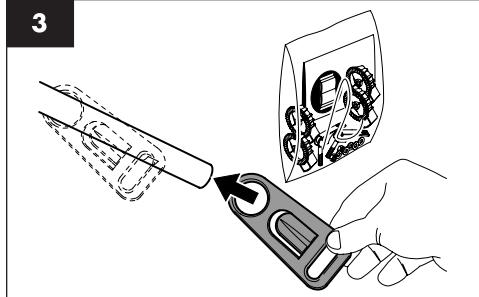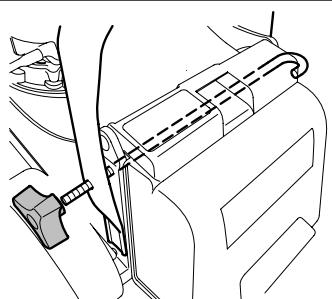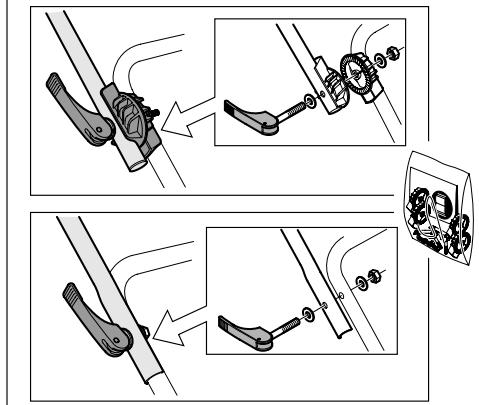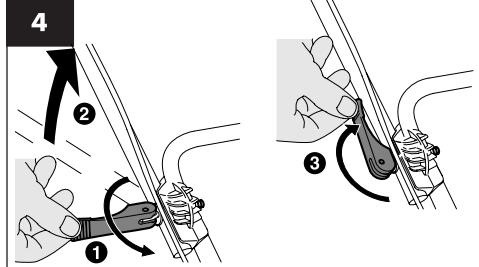1**2****3****4**

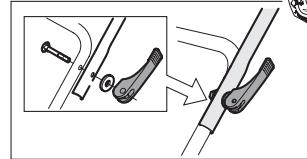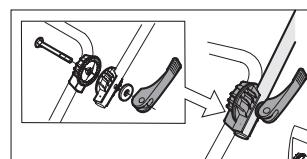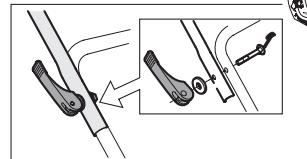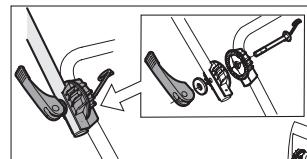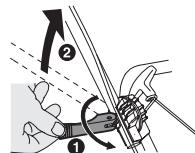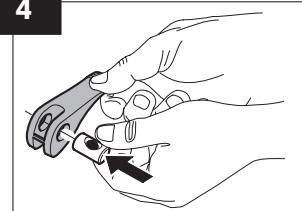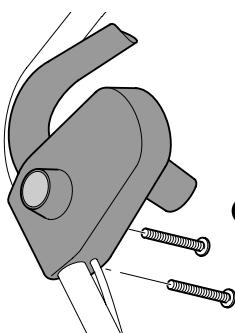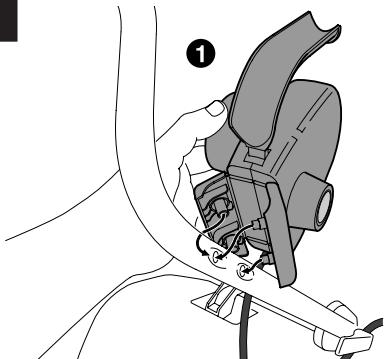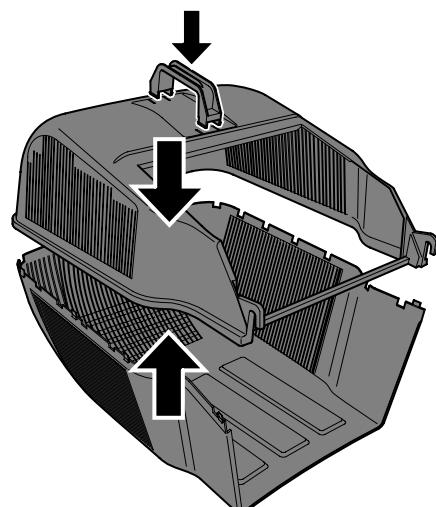4**5****6**

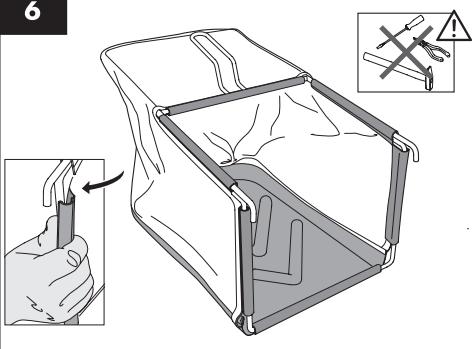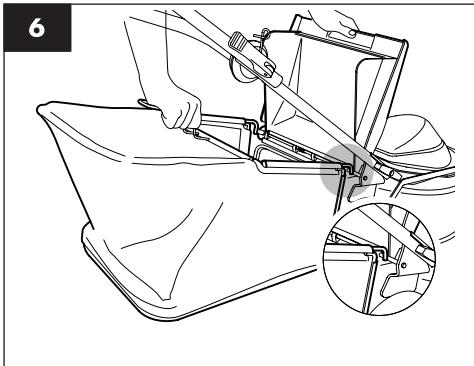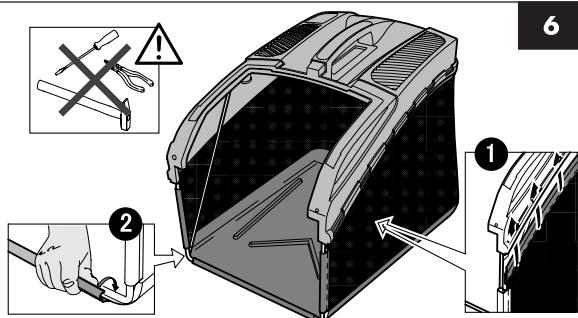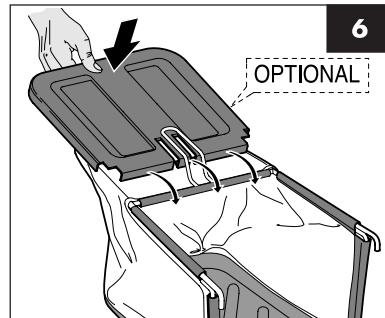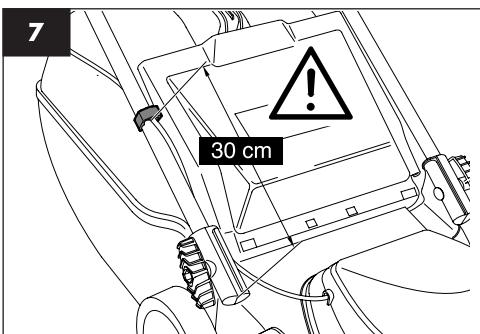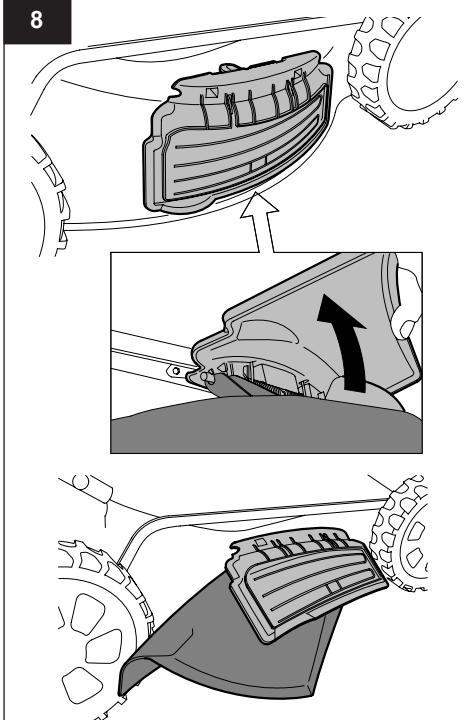6**6****6****6****7****8**

ADDENDUM 2002/96/EC WEEE

DE

Das Symbol  auf dem Produkt bzw. auf der Produktverpackung gibt an, dass dieses Produkt nicht als Hausmüllbehandelt werden darf. Zur Entsorgung ist es an einen entsprechenden Recycling-Punkt für elektrische und elektronische Geräte zu bringen. Durch die umweltgerechte Entsorgung dieses Produkts tragen Sie dazu bei, potentielle Folgeschäden ander Umwelt und Gesundheitsschäden zu verhindern. Ausführlichere Informationen über das Recycling dieses Produkts erhalten Sie auf Wunsch von Ihrem Stadt- oder Gemeinderat, den für die Haushaltsmüllentsorgung zuständigen Behörden oder dem Geschäft, in dem Sie dieses Produkt gekauft haben.

Eine nicht korrekte Entsorgung des Gerätes hat die Anwendung der gesetzlich vorgesehenen Strafen zur Folge.

EN

The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local council office, your household waste disposal service or the shop where you purchased the product.

When assembling this appliance, please follow the instructions for assembly printed towards the end of the manual.

FR

Le symbole  sur le produit ou sur son emballage indique que ce produit ne doit pas être traité comme déchet ménager. Il doit obligatoirement être déposé au point de collecte prévu pour le recyclage du matériel électrique et électronique. En vous conformant à une procédure d'enlèvement correcte du produit devenu obsolète, vous aiderez à prévenir tout effet nuisible à l'environnement et à la santé, qu'une manipulation inappropriée de celui-ci pourrait autrement provoquer. Pour de plus amples informations sur le recyclage de ce produit, veuillez contacter votre mairie ou collectivité locale, la déchetterie de votre localité ou le magasin où vous avez acheté le produit.

IT

Il simbolo  che appare sul prodotto o sulla confezione indica che il prodotto non può essere smaltito come rifiuti domestici. Invece deve essere consegnato all'inerente punto di raccolta per il riciclo di apparecchi elettrici o elettronici. Assicurandosi che questo prodotto venga smaltito correttamente, si aiuta a prevenire potenziali conseguenze negative per l'ambiente e per la sanità delle persone, che potrebbero altrimenti essere causate con l'incorretto smaltimento di questo prodotto. Per ulteriori informazioni dettagliate sullo smaltimento, si prega contattare il locale comune, il servizio dello smaltimento dei rifiuti oppure il negozio dove il prodotto è stato acquistato.

Il non corretto smaltimento dell'apparecchio comporterà l'applicazione delle sanzioni previste dalla legge.

NL

Het symbool  op het product of de verpakking betekent dat dit product niet mag worden behandeld als gewoon huishoudelijk afval, maar in plaats daarvan moet worden ingeleverd bij het punt voor recycling van elektrische en elektronische apparatuur. Door dit product correct te verwijderen helpt u om de negatieve gevolgen die een verkeerde verwerking van dit product kan hebben voor het milieu en de gezondheid te voorkomen. Voor verdere informatie over recycling van dit product kunt u contact opnemen met uw gemeente, de relevante dienst voor de verwerking van huishoudelijk afval of de winkel waar u het product hebt gekocht.

De onjuiste verwerking van het toestel brengt de oplegging van de door de wet voorziene sancties met zich mee.

ES

El símbolo en el producto o en su envase indica que no se puede tratar este producto como desperdicio doméstico. Deberá por lo tanto depositarse en el punto de recogida aplicable para el reciclado de equipos eléctricos y electrónicos. Asegúrese de eliminar este producto correctamente, ayudará así a evitar consecuencias potenciales negativas para el medio ambiente y la salud humana, que podrían de lo contrario ocurrir con el manejo inapropiado de los residuos de este producto. Para obtener información más detallada sobre el reciclado de este producto, contacte con la oficina municipal local, con el servicio de eliminación de desperdicios domésticos o con la tienda donde compró el producto.

La no correcta eliminación del aparato conllevará la aplicación de las sanciones previstas por la ley.

PT

O símbolo existente no produto ou na respectiva embalagem indica que o produto não pode ser tratado como lixodoméstico. Por conseguinte, deverá ser depositado no ponto de recolha aplicável para efeitos de reciclagem de equipamento eléctrico e electrónico. Ao assegurar-se de que a deposição deste produto é efectuada da forma correcta, estará a contribuir para evitar consequências potencialmente negativas para o ambiente e a saúde humana, que, de outro modo, poderiam ser causadas pelo manuseamento inadequado deste produto. Para mais informações sobre a reciclagem deste produto, contacte o gabinete municipal da sua localidade, o serviço de recolha de lixos domésticos ou a loja onde adquiriu o produto.

A deposição incorreta do aparelho leva à aplicação das sanções previstas pela lei.

HU

Ez a szimbólum a terméken vagy a csomagolásán azt jelzi, hogy ezt a terméket nem szabad háztartási hulladékkel kezelni. Le kell adni az elektromos és elektronikus készülékek újrahasznosításra szolgáló megfelelő begyűjtő helyen. E termék megfelelő elhelyezésének biztosításával n segít megelőzni a környezetre és az emberi egészségeset leg ártalmas olyan negatív következményeket, amelyeket egyébként okozhatna a termék nem megfelelő kidobása. E termék újrahasznosításával kapcsolatban részletesebb tájékoztatásért forduljon a helyi önkormányzathoz, aháztartási hulladék elhelyezési szolgálathoz, vagy az üzlethez, ahol a terméket vásárolta.

A készülék nem megfelelő hulladékkezelése büntethető a törvények előírása szerint.

PL

Symbol na produkcie lub jego opakowaniu oznacza, że po utracie wartości użytkowej dany wyrob nie może być traktowany tak jak inne odpady. Należy przekazać go do punktu zbiórki urządzeń elektrycznych i elektronicznych przeznaczonych do recyklingu. Przestrzegając zalecanych zasad postępowania ze zużytym produktem zapobiegasz ewentualnym negatywnym konsekwencjom dla zdrowia i środowiska, jakie mogłyby nastąpić w wyniku niewłaściwego sposobu pozbycia się wyrobu. Szczegółowych informacji na temat recyklingu tego produktu mogą udzielić władze lokalne, służby zajmujące się wywozem śmieci lub pracownicy sklepu, w którym produkt został zakupiony.

Niepoprawna likwidacja urządzenia powoduje zastosowanie odpowiednich kar przewidzianych przez prawo.

CZ

Tento symbol na výrobku nebo na obalu znamená, že s výrobkem nelze nakládat jako s odpadem domácnosti. Výrobek je třeba odnест do povoleného sběrného místa k recyklaci elektrických a elektronických zařízení. Zajištěním správné likvidace výrobku pomůžete předejít potenciálním záporným vlivům na životní prostředí a lidské zdraví, které by se mohly projevit v případě likvidace tohoto výrobku nepatřící způsobem. Podrobnější informace o recyklaci tohoto výrobku si vyžádejte na Vašem obecním úřadu, od firmy zabývající se likvidací domácího odpadu anebo v prodejně, kde jste výrobek zakoupili.

Nesprávný postup při likvidaci přístroje má za následek sankce, které jsou stanoveny ze zákona.

SK

Symbol  na výrobku alebo na jeho obale označuje, že výrobok sa nesmie považovať za domáci odpad, a musísa odovzdať do príslušného zberného centra, kde sa recykluje jeho elektrické a elektronické zariadenie. Zabezpečením správneho skartovania výrobku prispjete k prevencii potenciálnych negatívnych následkov na životné prostredie a zdravie ľadovka, ktoré mohli byť zapríčinené nesprávnou likvidáciou tohto výrobku. Ďalšie informácie o recyklovaní tohto výrobku sa dozviete na miestnom úrade, v organizácii, ktorá zabezpečuje likvidáciu domáceho odpadu alebo v predajni, kde ste výrobok kúpili.

Nesprávny postup pri likvidácii prístroja má za následok sankcie, ktoré sú stanovené zo zákona.

RU

Символ  на изделии или на упаковке показывает, что это изделие нельзя выбрасывать вместе с бытовым мусором. Вместо этого оно должно быть отнесено на подходящий сборный пункт для утилизации электрического и электронного оборудования. Обеспечив, чтобы это изделие было выброшено правильным образом, Вы поможете предотвратить потенциальные негативные последствия для окружающей среды и здоровья людей, что могло бы случиться при неправильном обращении с этим изделием, выброшенным в бытовой мусор. Для более подробной информации об утилизации этого изделия, пожалуйста, свяжитесь с офисом Вашего местного совета, службой удаления бытового мусора или с магазином, где Вы приобрели это изделие.

Несоответствующая утилизация устройства приводит к применению санкций, предусмотренных законом.

EL

Το σύμβολο  στη συσκευή ή στη συσκευασία του δείχνει ότι αυτή η συσκευή δεν μπορεί να επεξεργαστεί ως οικιακά απόβλητα. Αντί αυτού θα παραδοθεί στο κατάλληλο σημείο συλλογής για την ανακύκλωση του ηλεκτρικού και ηλεκτρονικού εξοπλισμού. Με την εξασφάλιση ότι αυτή τη συσκευή πετάγεται σωστά, θα βοηθήσετε να αποτρέψετε τις πιθανές αρνητικές συνέπειες για το περιβάλλον και την ανθρώπινη υγεία, τα οποία θα μπορούσαν να προκληθούν με τον ακατάλληλο χειρισμό απόβλητων αυτής της συσκευής. Για περισσότερες αναλυτικές πληροφορίες για την ανακύκλωση αυτής συσκευής, παρακαλώ ελάτε σε επαφή μετο τοπικό γραφείο του. Η μη σωστή αποκομιδή της συσκευής θα προϋποθέτει την εφαρμογή των προβλεπόμενων από το νόμο κυρώσεων.

Η μη σωστή αποκομιδή της συσκευής θα προϋποθέτει την εφαρμογή των προβλεπόμενων από το νόμο κυρώσεων.

TR

Ürünün ya da ambalajının üzerindeki simbolü, bu ürune evlerden çöktür olağan atık madde muamelesi yapılmayacağının belirtir. Bu ürün bertaraf edileceğin zaman, elektrikli ve elektronik cihazların geri dönüştürülmesi için uygun toplama noktasına götürülmelidir. Bu ürünün gerektiği gibi bertaraf edilmesini sağlayarak çevre ve insan sağlığı için olumlu etkilerin sağlanması etmeli olacaklardır. Aksi takdirde, bu ürün için uygun olmayan atık madde muamelesi yapılmış olabilir. Bu ürünün geri dönüştürülmesi için lütfen bertaraf edilmemesi kanunlar tarafından öngörülen yaptırımların uygulanması sonucunu doğuracaktır.

NO

Symbolet på  produktet eller på produktets innpakning angir at dette produktet bør muligens ikke bli behandlet som husholdningsavfall. Det skal i stedet bli levert inn på et egnet samlepunkt for gjenvinning av elektrisk og elektronisk utstyr. Ved å forsikre deg om at dette produktet er deponert korrekt, hjelper du med å forebygge negative virkninger på miljøet og menneskelig helse, som ellers kan bli forårsaket av uhensiktsmessig avfallshåndtering av dette produktet. For mer detaljert informasjon om gjenvinning av dette produktet, vennligst ta kontakt med kommunekontoret på stedet, renovasjonstjenesten for husholdningsavfall, eller butikken hvor du kjøpte produktet.

Uhensiktsmessig avhending av dette apparatet vil føre til passende lovmessig straff

FI

Tuotteessa tai pakkaussessa oleva  merkki tarkoittaa, että tästä tuotetta ei voi hävittää talousjätteiden tavoin. Sen sijaan täytyy viedä käsiteltäväksi asianmukaiseen sähkö- ja elektronisten laitteiden kierrätyspisteesseen. Kun hävität tämäntuotteen asianmukaisesti, autat estämään ympäristölle ja ihmisiille mahdollisesti aiheutuvia haitallisia jälkkiseuraauksia, joita saattaa syntyä, jos tämä tuote hävitetään väärällä tavalla. Tarkempia tietoja tämän tuotteen kierrätyksestä saat ottamalla yhteyttä paikalliseen kunnanvirastoon, kotitalouksien jätepalveluun tai liikkeeseen, josta ostit tuotteen.

Mikä tahansa laitteen väärä hävittäminen panee täytäntöön asiaankuuluvat lailliset rangaistukset

SE


Symbolen  på produkten eller dess förpackning indikerar att denna produkt ej kan hanteras som hushållsavfall. Den skall istället överlämnas till passande återvinningsstation för återvinning av elektrisk och elektronisk utrustning. Genom att se till att denna produkt omhändertas ordentligt kan du hjälpa till att motverka potentiella negativa konsekvenser på miljö och människor, vilka annars kan orsakas genom oriktig avfallshantering av denna produkt. För mer detaljerad information om återvinning av denna produkt, kontakta din kommun, din hushållsavfallsservice eller affären där du köpte produkten.

Olämpligt skrotande av apparten straffas enligt lag.

DK

Symbolet  på produktet eller emballagen angiver, at dette produkt ikke må behandles som almindelig husholdningsaffald. Det skal i stedet indleveres på en genbrugsstation, hvor man tager sig af elektrisk og elektronisk udstyr. Når du bortskaffer dette produkt korrekt, er du med til at forhindre den negative indvirkning, der ellers kan være på sundhed og miljø. Du kan få yderligere oplysninger om genbrug af dette produkt ved at kontakte de lokale myndigheder, ditrenoveringselskab eller den butik, hvor produktet er købt.

Enhver uhensiktsmæssig bortskaffelse af udstyret vil medføre en bødestraf

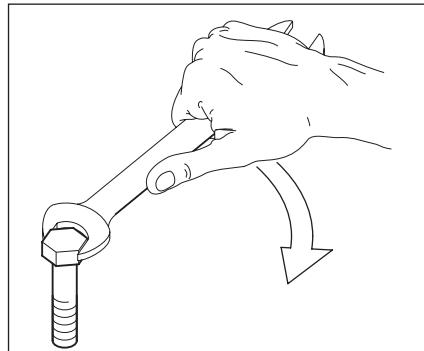

Valori di serraggio vite lama
Blade screw tightening values

Apparecchio <i>Device</i>	Serraggio vite lama Nm <i>Blade screw tightnen max torque</i>	
	min	max
Rasaerba a scoppio Con vite Lama 3/8 UNF classe resistenza 10.9 Petrol engine Lawnmower <i>With blade screw 3/8 UNF class 10.9</i>	60	70
Rasaerba elettrico Con vite Lama M9 classe resistenza 4.8 Electric Lawnmower <i>With blade screw M9 class 4.8</i>	25	35
Scarificatore Con vite Lama M8 classe resistenza 8.8 Aerator <i>With blade screw M8 class 8.8</i>	35	45